


FOLDING DOOR


Assembly Instructions Plevelux

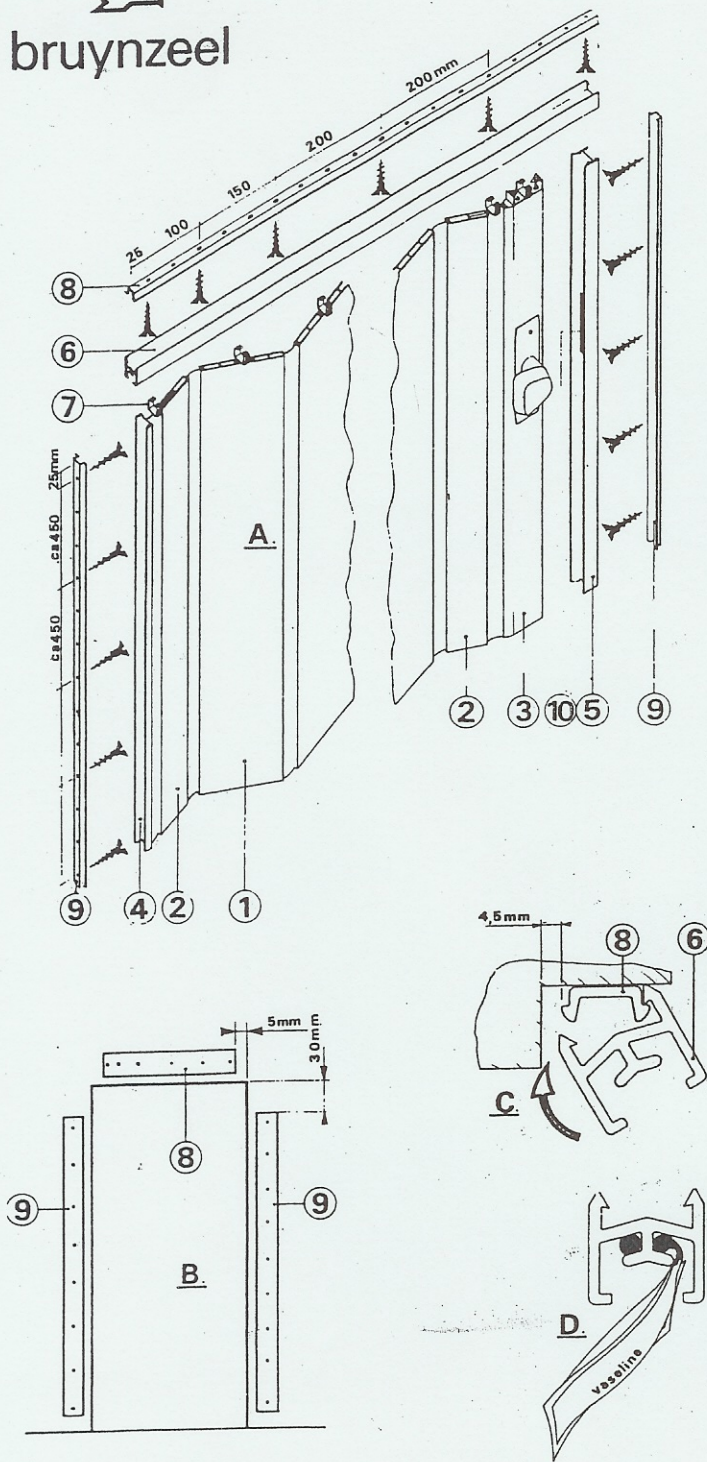


1. Measure the height and width of the door opening (preferably in the rebate of the door frame).
If the width of the door is 78 cms or less, 5 main sections (1) are enough instead of the 6, which are the normal contents of the standard packing.
2. Place the folding door on a flat surface and make sure the upper edges of the door sections are level before beginning to saw. The sawing height = the height of the door opening less 3 cms. Saw off the bottom edge of the sections with a hacksaw, so that they are all of equal length.
N.B.: Make sure the sections can't shift out of position while you are sawing. Sander burrs with finesandpaper.
3. Saw the assembly rails (8) and (9) to the correct length.
i.e.: door height less 5 cms = 2 x (8)
door width less 1 cms = 1 x (9)
4. Saw the rail profile (6) to the exact width of the door opening. Please be careful to saw-off the correct side.
5. Decide on which side the magnetic closure must come (so that the door will be hanged correctly).
6. Now fix the assembly rails (8 and 9) tot the frame (see detail B). Remember to leave a space between the assembly rail (8) and the frame rebate (see detail C). To fix the distance, use a smal trace of material, 4.5 mm thick.
7. Slip the rail profile (6) through the sliding eyes of the suspension points (7), the door being folded together. The side with the red label is always placed to the post-profile (4). Remove the red label.
8. Clip the rail profile (6) with the folding door on to the upper assembly rail (See detail C) then clip the post profile (4) on to the side post.
9. Saw the bolt profile (5) to the correct length, sawing from the bottom. The bottom, measured from the bolt plate (10), being the longest edge.
10. Now assemble the door knobs by pressing the two parts together. Make sure the knobs are in the right position.
11. In order to allow the folding door to run smoothly, the rail profile requires to be treated with vaseline from the tube supplied.

- ♦ open the mounted door as far as possible.
- ♦ squeeze the vaseline directly in front of the lock profile (3) on tho the bearing faces of the rail profile (see D) so that these are well covered.
- ♦ open and shut the door several times.

If, in your opinion, the door still does not run smoothly enough, repeat the above once more.

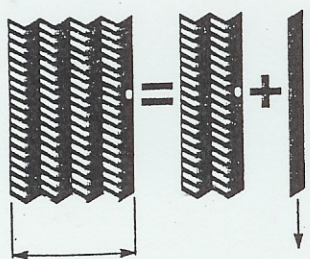

90 ... 100 cm	1
100 ... 110 cm	2
110 ... 120 cm	3
120 ... 130 cm	4
130 ... 140 cm	5
140 ... 150 cm	6
150 ... 160 cm	7
160 ... 170 cm	8
170 ... 180 cm	9
180 ... 190 cm	10
190 ... 200 cm	11

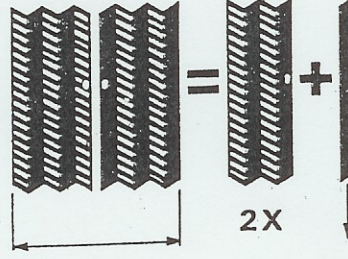

180 200 cm	2
200 220 cm	4
220 240 cm	6
240 260 cm	8
260 280 cm	10
280 300 cm	12
300 320 cm	14
320 340 cm	16
340 360 cm	18
360 380 cm	20
380 400 cm	22

Maintenance.

The door may be cleaned with a detergent or a washing-up liquid. Do not use solvents like white spirits, cleaning spirit, etc.